



Feiyu SCORP Pro Camera Compatibility List

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HUB Version Info.	Remark
GoPro	a 6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	1. After connecting the cable, be sure to power on the SCORP Pro before the camera. 2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video.
	a 6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	a 6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	
	a 6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	a 6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	HUB_V101	
	a7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V101	
	a7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V101	
	a7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	HUB_V101	
	a7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	
		Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V103	
	a7R MA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V101	
	a7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	HUB_V101	
	a7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	HUB_V101	
a9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	HUB_V101		
a9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	HUB_V101		
A7C	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	HUB_V103	
a1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101		
Sony	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101	1. After connecting the cable, be sure to power on the SCORP Pro before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
		✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	HUB_V101		
	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01		HUB_V103
a7S III	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	HUB_V103	1.1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote"; (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 6. After swiping from one cable to another, both camera and gimbal need to be rebooted.
FX3		Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V103	
FX3	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	HUB_V103	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HUB Version Info.	Remark
Canon	Powershot G7 X Mark III	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.1	HUB_V101	1. Be sure camera Wi-Fi is off before connecting the cable 2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	
	EOS 850D	Type-C to micro (A03)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.0.0	HUB_V103	
	EOS 80D	Type-C to mini (B02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	HUB_V101	
	EOS 90D	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	
	EOS 6D	Type-C to mini (B02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.8	HUB_V101	
	EOS 6D Mark II	Type-C to mini (B02)	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.1.1	HUB_V101	
	EOS 5D Mark III	Type-C to mini (B02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	HUB_V101	
	EOS 5D Mark IV	Type-C to micro (A03)	✓	✓	✓	✗	✗	✗	✗	✓	✓	1.1.2	HUB_V101	
	EOS 5DS R	Type-C to micro (A03)	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.1.1	HUB_V101	
	EOS RP	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.0	HUB_V101	
	EOS R	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	HUB_V101	
	EOS R5	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.1	HUB_V101	
	EOS R6	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.1.1	HUB_V101	
	EOS-1D X Mark III	Type-C to Type-C (C02)	✓	✓	✓	✓	✓	✓	✗	✗	✗	V1.1.0	HUB_V101	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HUB Version Info.	Remark
Panasonic	GH5S	Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	HUB_V101	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	HUB_V103	
		TypeC to TypeC (C02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	HUB_V103	
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	HUB_V101	
	G9	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
	S5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
		Type-C to Type-C (C02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
SHH	TypeC to TypeC (C02)	✓	✓	✓	✗	✗	✗	✗	✗	✗	V2.4	HUB_V1.02		

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HUB Version Info.	Remark
富士	X-T20	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, Feiyu SCORP Pro can control camera to start recording.
	X-T30	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	
	X-T100	Type-C to TRS2.5(T02)	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	HUB_V101	
	X-H1	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	HUB_V101	
	X-T3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	HUB_V101	
	X-T4	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	
	X-S10	Type-C to TRS3.5(T03) (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	HUB_V101	
	X-T200	Type-C to TRS3.5(T03) (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	HUB_V101	
	X-E3	Type-C to TRS2.5(T02)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	HUB_V101	
	SIGMA	FP	TypeC to TypeC (C02)	✓	✓	✗	✗	✗	✗	✗	✗	✗	3.00	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Zoom Control (digital or optical)	Camera Firmware Version	HUB Version Info.	Remark
BMPPCC	6K	TypeC to TypeC (C02)	✗	✓	✓	✗	✗	✗	✗	✗	✗	V7.3	HUB_V1.02	

Notice:
 1. "✓" Means Support this function, "✗" Means Do not Support;
 2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;
 3. When connecting by Type C to TRS3.5(T03), Type C to TRS2.5(T02) and USB2.0 to Mini USB (B01), the camera icon on the gimbal screen will not light up, long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.